









# PARAMETERS AND INSTRUCTIONS XBTN200



- Used the side arrow ( ) to scroll the items inside the menu.
- Identified the voice of the parameter you want to modify, press “MOD” () to enter programming.
- Setting the parameters increasing or decreasing the values to enter with the arrow on and down ( )  
( ).
- Confirm the desired value with “ENTER” ()

Following the table with the values set by default:

VOICE	DESCRIPTION	VALUE PARAMETER
BYPASS PHOTOC.	Allow to bypass the photocells	0 = bypass disabled / 246 = bypass active
FLOOR 1	It must always be enabled. Up to 3 stops	1 = Enable
FLOOR 2	It must always be enabled. Up to 3 stops	1 = Enable
FLOOR 3	It must always be enabled. Only 4 stops	1 = Enable
T. STOP P1	Floor stop delay time. 3 stops	3.0 s
T. STOP P2	Floor stop delay time. 3 stops	3.0 s
T. STOP P3	Floor stop delay time. 3 stops	3.0 s
T. STOP P4	Floor stop delay time. Only 4 stops	3.0 s
FLASHING LIGHT ON BOARD	Flashing led light on board at the end of cycle.	0 = Disabled
LIGHT ON BOARD	Time off led light on board.	30 s
OCCUPIED	Time of busy. Time that enables the push button.	5 s
RUN TIME SET	Hydraulic control unit shutdown time.	300 s