



UPDINAMIC s.r.l.
Via Modigliani, 22
37045 - LEGNAGO(VR)

USER MANUAL INTEGRATIVE SHEET:
- UP RT

SERIAL NUMBER

THE OWNER MUST KEEP THIS MANUAL AND THE ATTACHMENTS LISTED BELOW IN THE OWNER'S
UTILITY SHAFT:

MACHINE MANUAL

MAINTENANCE MANUAL

ELECTRICAL PART MANUAL

INSTALLATION MANUAL

INSTRUCTIONS DOR USE "UP RT"

The use of the goodslift model UP RT without the protection at the courtyard floor was conceived with the deadman device condition, the user has the responsibility of looking to see that the upper platform of the goodslift is **completely free of things or persons during movement.**





INSTRUCTIONS FOR THE PUSHBUTTON USE

Premise:

The pushbutton must be fixed considering to keep the platform in view of the operator

- Carry out the ascent or descent maneuver from the outside using the supplied pushbutton. It can be supplied with normal selector or with key selector (1)
- During handling the warning light (2) will have an intermittent light (flashing light)



If there are no physical protections, monitor the maneuvering area during handling

- Upon reaching the floor, release the command. Upon arrival at the floor the light will remain on to signal the completion of the cycle
- At this point, from the arrival floor it will be possible to access the platform

CYCLE INTERRUPTIONS

When the interruption of the up or down cycle is caused by the release of the operator's hold-to-run command, if no alarm has occurred, the maneuver can be resumed normally or reversed to change the direction of translation.

When the interruption of the ascent or descent is caused by the intervention of an alarm or an emergency button (3), once normal operating conditions have been restored it is possible to resume the ascent or descent maneuver normally.

